

AXMINSTER

PROfessional

AP300LF Lifting Table



Fully read manual and safety instructions before use. Save this manual for future reference.



Do not stand on



Do not sit on

The symbols above advise the correct safety procedures when using this machine.

CE
UK
CA

Original Instructions

Code	112137
Version	1
Published Date	30/9/2025

Dear User:

Thank you for purchasing this product.

Please read this manual carefully before using our AP300LF Lifting Table.



Do not stand on



Do not sit on



Scope of Use:

This worktable is designed for lifting workpieces within its specified load capacity.

Application Environment and Relevance:

This product must be used on hard, flat ground.

Precautions and Related Information:


- 1 Before using this product, read the manual carefully to understand its performance and usage. Obtain proper authorization before use.
- 2 Do not overload the worktable. Use it within the rated capacity (300 kg).
- 3 This product is not designed to carry people.
- 4 Keep hands and feet away from the surface coverage area.
- 5 Do not load loose or unstable items.
- 6 Do not load items on the platform or operate the worktable on inclined or uneven surfaces.
- 7 Engage the brakes when loading goods to prevent the worktable from moving.
- 8 Do not load cargo while moving the worktable.
- 9 After lifting, ensure goods do not move sideways on the platform.

Key Components:

- 1 Foot Pedal
- 2 Wheels
- 3 Base
- 4 Oil Cylinder
- 5 Lifting Arm
- 6 Upper Platform
- 7 Surface

Specifications:

Model	AP300LF
Base Dimensions (A x B) (mm)	1100 x 640
Total Height E (Position: Upper)	Approx. 1030 mm
Total Height E1 (Position: Lower)	Approx. 425 mm
Load Capacity (Max.)	300 kg
Net Weight Approx.	52.5 kg
Operating Temperature	10°C to 40°C
Note: The work surface is an optional part.	

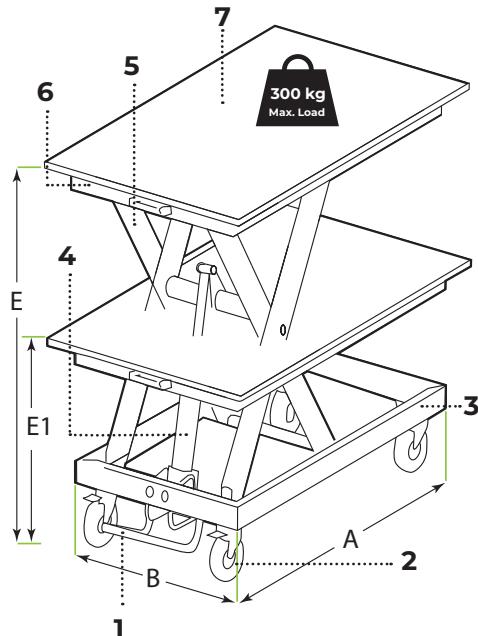

Assembly and Usage Instructions:

Assembly:

For convenient transportation and packing, the wheels (2) are not pre-assembled.

Usage:

- 1 Raising the Platform: Repeatedly press the foot pedal (1) up and down.
- 2 Lowering the Platform: Lift the foot pedal (1) upward (ensure it is lifted to the top).
- 3 Important: Always engage the brakes while loading and unloading. 

Care and Maintenance

Proper care and maintenance of this product can extend its service life and improve safety. The following checks must be carried out before each use:

- 1 Inspect the body for any deformation or damage.
- 2 Check for bending or other visible damage.
- 3 Ensure all fasteners on the body are secure and not loose or missing.
- 4 Inspect the wheels and brakes for excessive wear.
- 5 Check the hydraulic system for any leakage.
- 6 If any of the above issues are found, repair or replace the affected parts promptly.
- 7 Check all friction parts before use. If lubricating oil is lacking, please refill it.

Note: This should be checked at least once a year.

AXMINSTER

PROFESSIONAL

UK
CA CE

This worktable is designed for lifting
workpieces within its specified 300 kg or less.

EAN: 505251136296

Country of Origin: China

Axminster Tools UK Address
Unit 16 Weycroft Avenue,
Axminster, Devon, EX13 5PH

Axminster Tools European Address
A/201, Haagsche Hof, Partstratt 83,
The Hague, 2514GC, Netherlands

Axminster Tools, Axminster Devon EX13 5PH
axminstertools.com