


AW254TS Table Saw



INDEX OF CONTENTS

EU Declaration of Conformity	2
What's Included	3
General Instructions for 230V Machines	4
Specific Instructions for Table Saws	5
Specification	6
Assembly	6
Assembly Floor Stand	10
Illustration and Parts Description	11
Set Up and Adjustment	14
Operating Instructions	18
Changing the Saw Blade	19
Maintenance	20
Exploded Diagrams/Lists	22
Wiring Diagram	25

EU DECLARATION OF CONFORMITY

Object of the Declaration: Axminster Workshop AW254TS Table Saw (111810)		
UK: Supply of Machinery (Safety) Regulations 2008 as amended Electromagnetic Compatibility Regulations 2016 as amended	EU: Machinery Directive 2006/42/EC EMC Directive 2014/35/EU	UK Address: Axminster Tool Centre Ltd Weycroft Avenue Axminster, Devon EX13 5PH
Standards used or references to the other technical specifications in relation to which conformity is declared: ISO 19085-9:2024, ISO 12100:2010, EN 60204-1:2018, IEC 55014-1:2021, IEC 55014-2:2021, IEC 61000-3-2:2019+A1, 61000-3-3:2013+A1+A2		European Address: Axminster Tool Centre Ltd A-201, Haagsche Hof Parkstraat 83 The Hague 2514 JG Netherlands
Date: 7/29/2025 Place: Axminster	 Ian Styles Product Director	

The symbols below advise the correct safety procedures when using this machine.



Fully read manual
and safety instructions
before use



Ear protection
should be worn



Eye protection
should be worn



Dust mask
should be worn



Two Man
Assembly



HAZARD

WHAT'S INCLUDED

Quantity	Item	Part	Model Number
			AW254TS
1	Basic Table Saw	A	
2	Side Extension Tables plus supports	B	
1	Rear Extension Table	C	
2	Operating Wheels with Clamping Knobs	D	
1	Rip Fence Assembly	E	
1	Rip Fence Extension	F	
1	Rip Fence Rail with Scale	G	
1	Riving Knife	H	
1	Hose Support Bracket	I	
1	Dust Extraction Moulding	J	
1	Crown Guard with Clamping Handle	K	
1	Outer Flexible Hose	L	
4	Hose Clips	M	
1	Push Stick	N	
1	Blade Locking Bar	O	
1	24mm Spanner	P	
1	13-15mm Spanner	Q	
4	Hex Keys 6,5,3,2mm	R	
1	Handle Hex Key	S	
4	M8 Threaded Feet with nut/washer	T	
9	M8 Bolts, washers & one nut	U	
1	Inner Flexible Hose	V	
1	Base Plate	W	



GENERAL INSTRUCTIONS FOR 230V MACHINES

The following will enable you to observe good working practices, keep yourself and fellow workers safe and maintain your tools and equipment in good working order.



WARNING!! KEEP TOOLS AND EQUIPMENT OUT OF REACH OF YOUNG CHILDREN



KEEP WORK AREA AS UNCLUTTERED AS IS PRACTICAL. UNDER NO CIRCUMSTANCES SHOULD CHILDREN BE ALLOWED IN WORK AREAS.

Mains Powered Tools

- Tools are supplied with an attached 13 Amp plug.
- Inspect the cable and plug to ensure that neither are damaged. Repair if necessary by a suitably qualified person.
- Do not use when or where it is liable to get wet.

Workplace

- Do not use 230V a.c. powered tools anywhere within a site area that is flooded.
- Keep machine clean.
- Leave machine unplugged until work is about to commence.
- Always disconnect by pulling on the plug body and not the cable.

- Carry out a final check e.g. check the cutting tool is securely tightened in the machine and the correct speed and function set.
- Ensure you are comfortable before you start work, balanced, not reaching etc.
- Wear appropriate safety clothing, goggles, gloves, masks etc. Wear ear defenders at all times.
- If you have long hair wear a hair net or helmet to prevent it being caught up in the rotating parts of the machine.
- Consideration should be given to the removal of rings and wristwatches.
- Consideration should also be given to non-slip footwear etc.
- If another person is to use the machine, ensure they are suitably qualified to use it.
- Do not use the machine if you are tired or distracted
- Do not use this machine within the designated safety areas of flammable liquid stores or in areas where there may be volatile gases.
- Check cutters are correct type and size, are undamaged and are kept clean and sharp, this will maintain their operating performance and lessen the loading on the machine.
- **OBSERVE....** make sure you know what is happening around you and **USE YOUR COMMON SENSE.**

SPECIFIC INSTRUCTIONS FOR TABLE SAWS

Make sure the saw blade is the correct type for the job in hand. Do not force the saw, if the saw begins to 'stall' you are 'forcing the cut' or over working the saw.

Ensure that the saw blade is clean and sharp.

Resin build up on the blades will increase the friction of the saw passing through the timber, and cause over heating of the blade, blunt teeth will work harder tearing the fibre of the timber as opposed to shearing it, also with subsequent overheating. Both faults unnecessarily load the machine beyond normal usage, and shorten its longevity.

Do not use blades that are deformed in any way.

Do not remove the blade guard. The design of the riving knife on the machine will not allow for slotting or 'blind' grooving, so there is no reason to remove the guard.



FOR YOUR OWN SAFETY NEVER OPERATE THE TABLE SAW WITHOUT THE RIVING KNIFE IN PLACE!

Do not remove the riving knife.

Do not use any blades that cut a smaller kerf than the riving knife thickness. Make sure the riving knife is correctly adjusted to the blade and is securely fastened. If the table insert becomes damaged or broken, and will not support the timber 'up close' to the blade, replace it.



UNDER NO CIRCUMSTANCES SHOULD CHILDREN BE ALLOWED IN THE WORK AREA AND KEEP TOOLS AND EQUIPMENT OUT OF REACH OF YOUNG CHILDREN!



CONNECT A DUST EXTRACTION MACHINE TO THE SAW.

Do not start the saw with the work piece touching the blade.

Do not commence sawing until the blade has run up to full speed.

After switching off, never try to slow the saw down more quickly by applying side pressure (with a piece of wood?) to the blade. Apply the old joiner's adage of never getting hands within one handbreadth of the blade. Leave the machine disconnected from the mains supply until you are about to commence work.

Always disconnect the machine if you are leaving it unattended.

Never leave the vicinity of the machine unless the blade has come to a complete stop.

Do not attempt to carry out any maintenance, corrective work, setting up etc., unless the machine is disconnected from the mains supply. If any tools have been used during setting up procedures, make sure they are removed from the machine and stowed safely away.



USE THE SUPPLIED PUSH STICK WHEN CUTTING SMALL PIECES.

Do not attempt to carry out cross cutting operations 'freehand', always use the mitre fence for small stuff and the sliding carriage for larger work pieces. Do not attempt to 'rip' freehand, always use the guiding facility of the rip fence.

It is perfectly acceptable to support guide and feed the timber with your hands whilst ripping stuff of some length, however, as you approach the blade ensure that the push stick is to hand, and you use it.

Remember the emphasis of the 'push' should be between the blade and the fence and close to the fence. Use your free hand to support and guide the material on the offside of the saw blade and at least 100mm away from it. If the timber does not extend to at least 100mm to the offside of the saw blade, the material possibly does not need guiding or supporting.



WARNING! IF THE SAW JAMS! SWITCH OFF IMMEDIATELY.

Check that there are no foreign objects e.g. old nails, screws, small stones etc embedded in the material you are about to cut. If necessary take a wire brush to the timber before working.

SPECIFICATION

Code	111810
Model	AW254TS
Rating	Workshop
Power	1.5 kW 50Hz 230V 1ph
Blade Dia/Bore	254 mm / 30 mm
Blade Tilt	0° to 45°
Blade RPM	3,000 rpm
T Slot Size	19 mm x 9.5 mm (3/4" x 3/8")
Max Depth of Cut @ 45°	56 mm

Max Depth of Cut @ 90°	80 mm
Max Width of Cut with Fence	430 mm with R/H Ext
Table Size	485 x 680 mm
Table Height	900mm
Table Size With Extensions	1060 x 900 mm
Dust Extraction Outlet	100 mm and 63 mm
Min Extraction Airflow Required	1,000 m ³ /hr
Overall L x W x H	1,070 x 1,230 x 1,200 mm
Weight	109 kg

ASSEMBLY



WARNING! THE SAW IS HEAVY SEEK ASSISTANCE BEFORE LIFTING.

NOTE: If either sand or cabinet has been purchased, assemble them first, see page 12-13. Then mount the stand to the saw before moving the saw and standing it upright.

1. With assistance lift the saw assembly (A) from the box onto a suitable work surface. loosen the two grub screws on the operating wheels (D) and side each wheel onto the shafts. Nip-up grub screws to securing in place, see fig 01-02. Make sure the screws clamp against the machined face on the shaft. Insert the threaded locking knobs through the centre of each operating wheel and finger tighten.



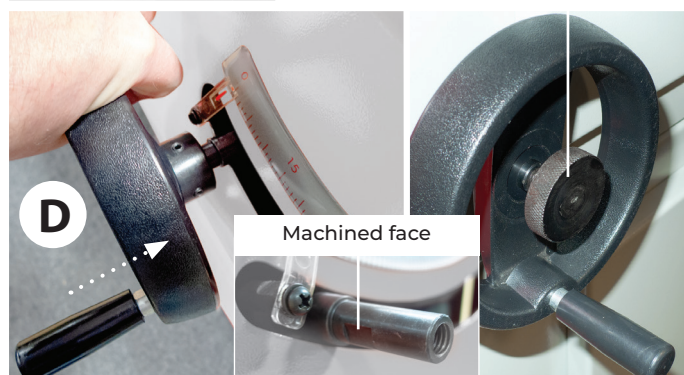


Fig 03-04-05

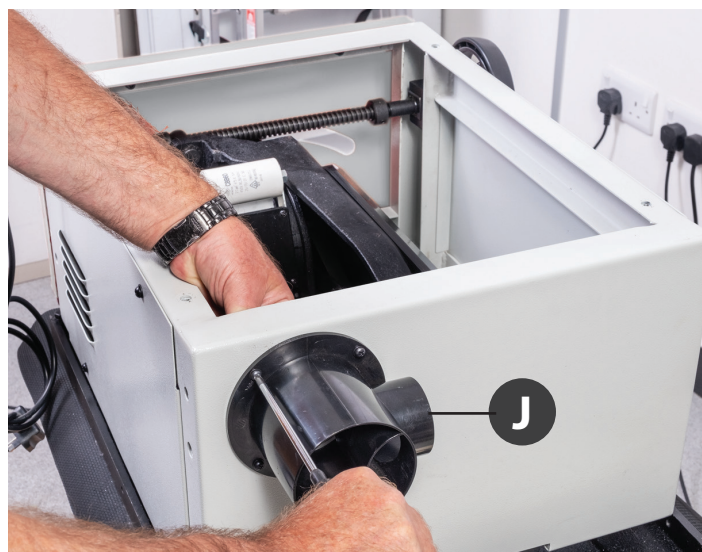


2. Undo and remove the screws, washers & nuts to separate the two parts of the dust extraction moulding (J). Position the inner mounting plate over the machine cut out for the extraction outlet. Repeat for the outer moulding, line up the holes and replace the screws to secure the assembly (J) in position, see fig 03-04-05.

Fig 06-07

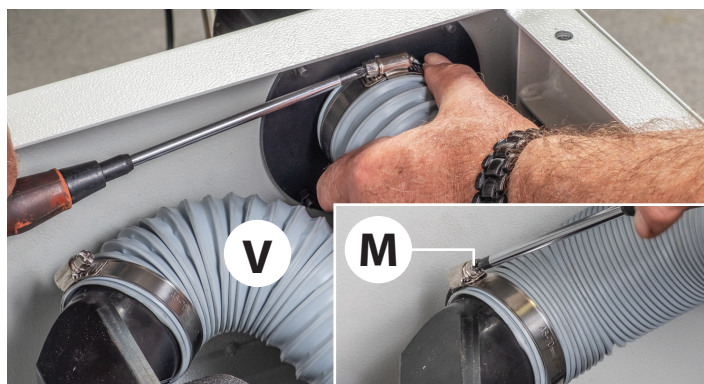


3. Locate the inner flexible hose (V) and two hose clips (M). Place a clip over each end of the hose and secure the hose over the extraction outlets, see fig 06-07.

Fig 08

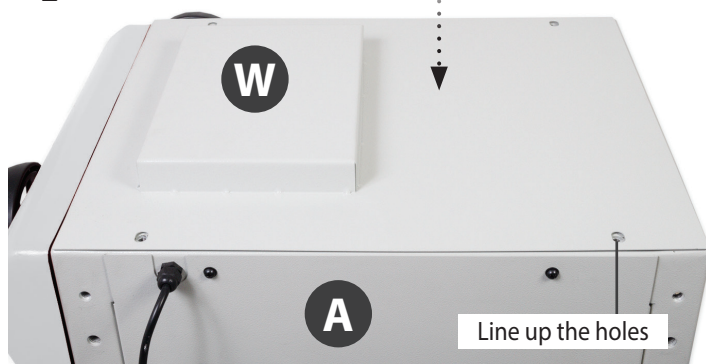

4. Place the base plate (W) to the base of the saw (A) and align the holes as shown in fig 8. Find the four threaded feet (T), screw each foot in turn into the threaded holes in each corner of the chassis, see fig 09 below. The feet will not be needed if mounting to the leg stand.

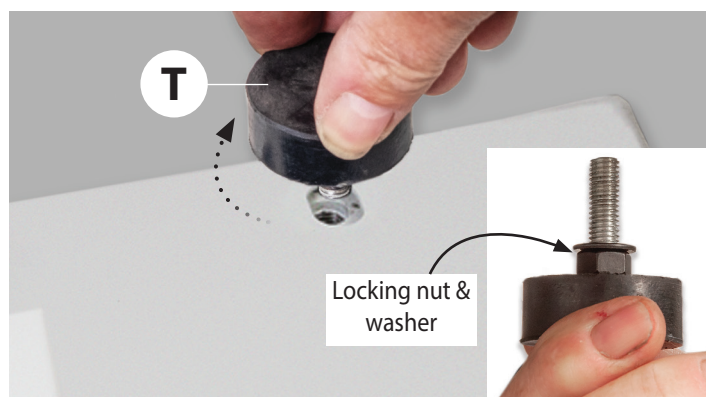

WITH ASSISTANCE TURN THE SAW ASSEMBLY OVER!

5. Lower the saw down, locate the side and rear extension tables (B-C) and M8 bolts/washers (U). Line up the holes in the side extension table (B) with the threaded holes to the side of the main cast iron table. Insert the bolts with washers (U) through the holes and secure the extension table (B) to the main cast iron table, see fig 10-11-12.

Fig 10-11-12





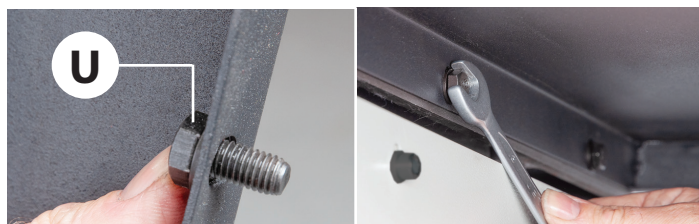


Fig 13-14-15

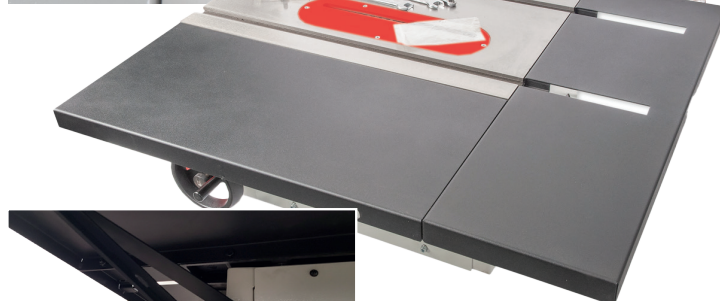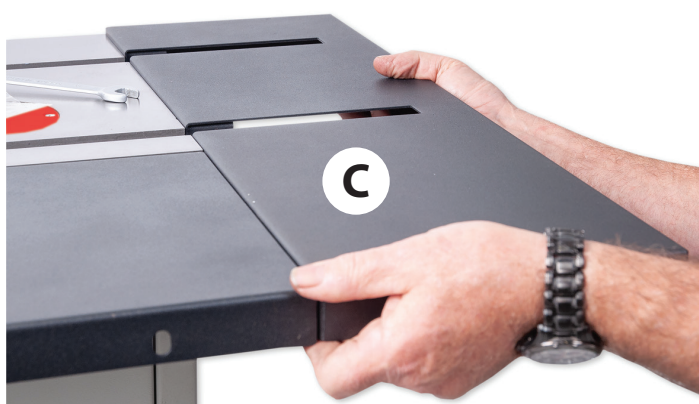

6. Repeat the procedure for the left & rear extension tables (C). Note: make sure you line up the machined slots in the table with the 19mm mitre 'T' slots in the cast iron table. Secure both extension tables together, see fig 13-14-15.





Fig 16-17

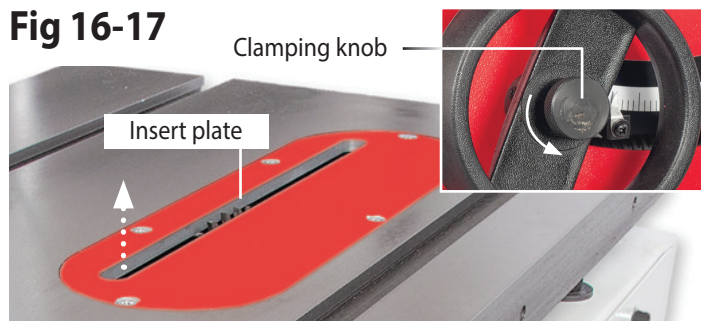

7. Raise the saw by first releasing the rise & fall operating wheel clamping knob, remove the five cross head screws holding the table insert and place safely aside, see 16-17. Raise the saw to its maximum height by turning the operating wheel anti-clockwise.

8. Find the riving knife (H) loosen the two nuts holding the riving knife clamping plates, slide the riving knife down between the two plates and lightly tighten to hold the riving knife in place. Check that the tip of the knife has a clearance of 3-8mm between the blade. Adjust the four grub screws to the opposite side of the clamping plate to align the riving knife with the blade. Tighten the nuts to secure the riving knife in place, see fig18-19-20. Adjust the levelling grub screws on the insert plate so it's level with the main table, see fig 21. Re-secure the insert plate.

Fig 18-19-20-21

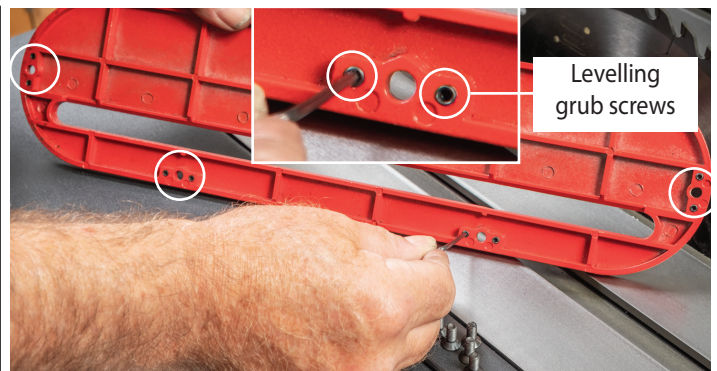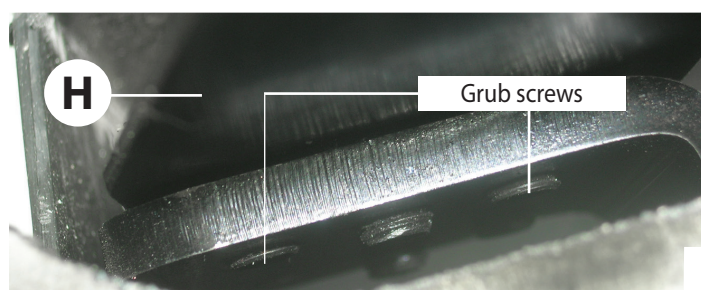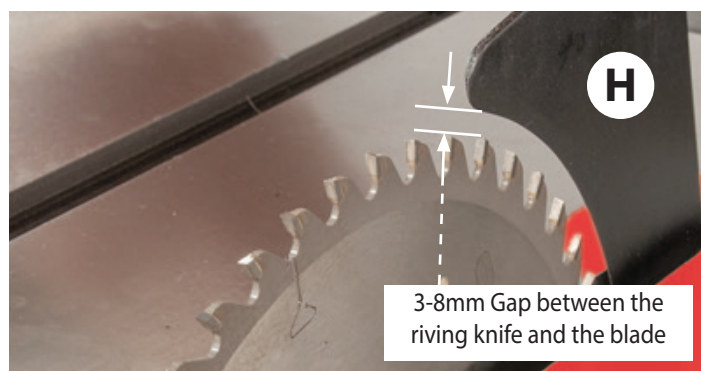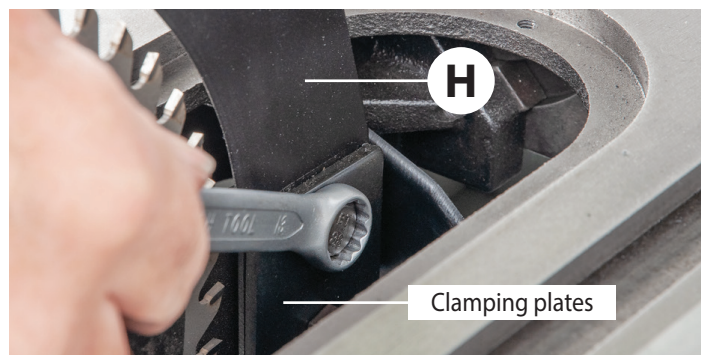

9. Locate the crown guard (K), flexible hose (L) and hose clips (M). Loosen the lift & shift handle on the crown guard. Introduce the slot to the rear of the crown guard (K) over the riving knife and slot pin bolt into the curved slot in the riving knife. Tighten the handle, see fig 22.

Fig 22



NOTE: DO NOT OVERTIGHTEN AS THE CROWN GUARD IS PLASTIC AND COULD BE DAMAGED!

10. Locate the flexible hose (L), place a hose clip (M) over one end. Insert the hose over the extraction outlet on the crown guard (K) and tighten the clip. Place the remaining clip over the opposite end of the hose, insert the hose over the extraction out moulding (J) and tighten, see fig 23-24.

Fig 23-34



Fig 35



11. Put to hand four M8 Bolts with washer/nuts (U) and rip fence rail with scale (G). Insert two bolts with washers up through the holes to the underside end of the side extension table (B) and lightly screw on two bolts. Place the remaining two bolts with washer into the threaded holes to the underside of cast iron table, see fig 35. **Note: make sure to give enough clearance between the tables and bolts for the next step.**

12. Line up the machined slots in the rip fence rail (G) with the bolts and slide the rail up against the tables. Nip up the bolts to secure the rail, see fig 36-37.


Fig 36-37



13. Locate the rip fence (E) and lower the clamp assembly down over the fence rail (G) and press down the locking lever to secure in position, see fig 38.


14. Find the rip fence extension (F), slot the two 'T' bolts mounted in the rip fence (E) into the 'T' slot on the fence extension and nip up the butterfly knob clamps, see fig 39. **Note: the extension (F) can be set in two positions, see fig 40.**

Fig 38-39-40

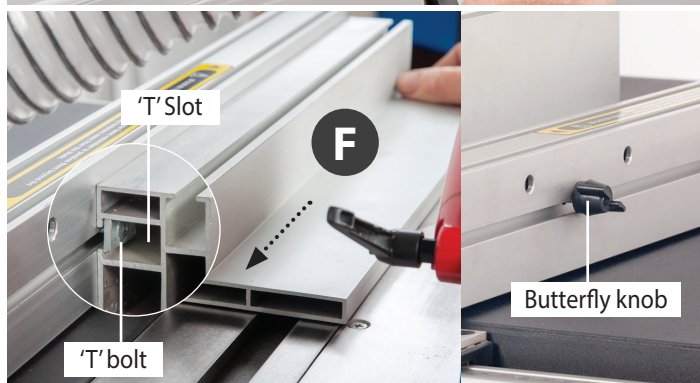

15. Locate the hose support bracket (I) and secure it to the side extension table (B) using a M8 bolt washer/nut (U). Insert the holes (L) into the hose bracket, see fig 41.

Fig 41

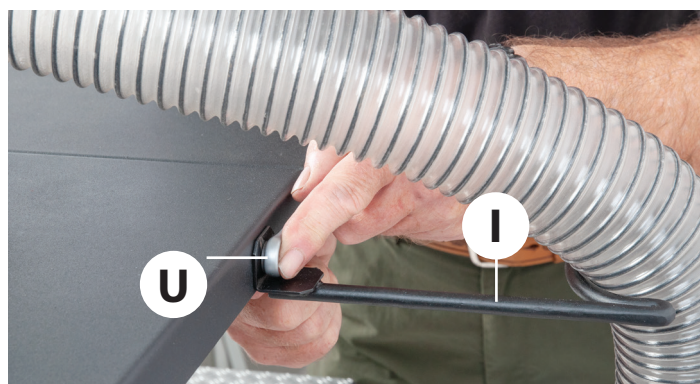

16. Place a straight edge across the tables and check they are level and make adjustment until correct.


ASSEMBLY FLOOR STAND

Locate all the components on page 04 and assemble as follows.

Step 1



Step 2

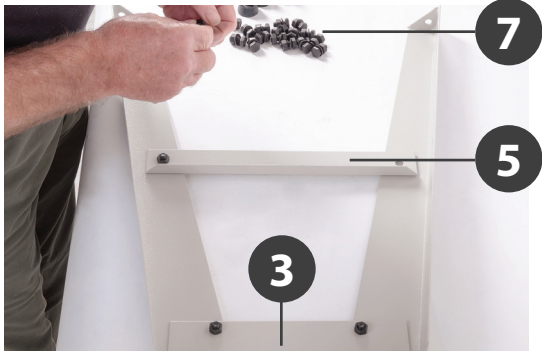

Step 3




Step 4



Mounting the Stand to the Saw

Remove the rip fence, crown guard and hose and lower saw blade below the table. With assistance turn the saw assembly (A) over & remove the four rubber feet (T). Place the base plate (W) on top and align the holes as shown in step 5. Lower the stand on top of the saw, line up the holes and secure using the caphead bolts & washers (19). Place the assembly upright on the floor, see step 6.

Step 5

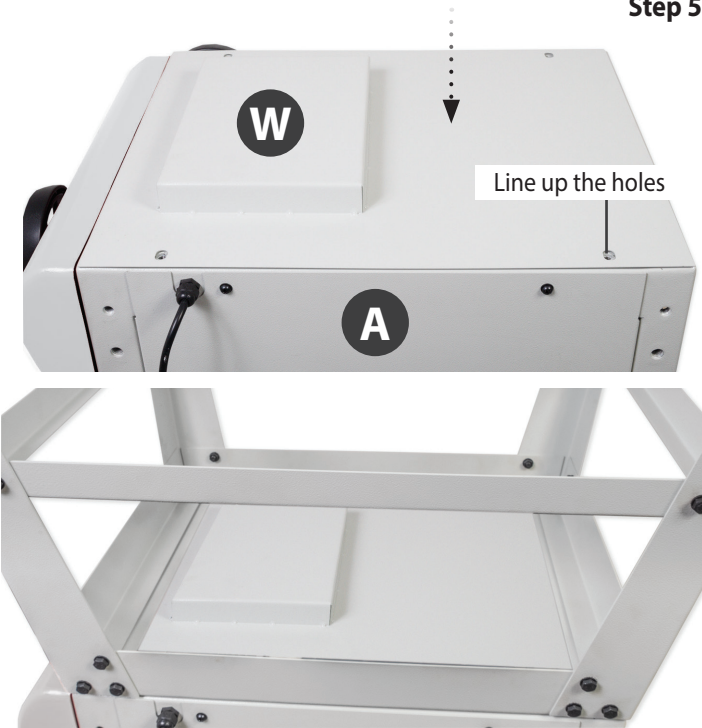


Step 6




ILLUSTRATION AND PARTS DESCRIPTION



ILLUSTRATION AND PARTS DESCRIPTION

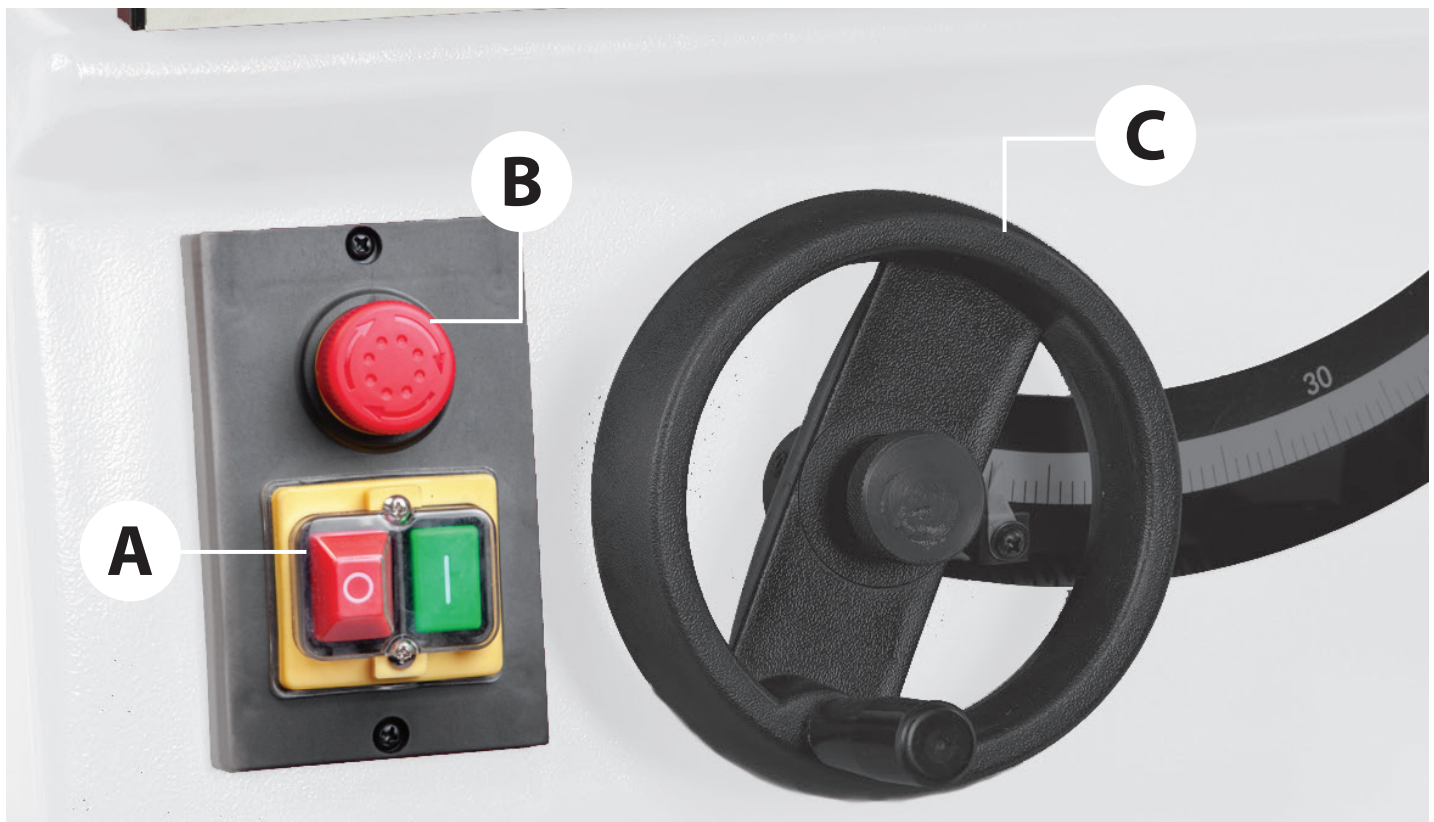

ON/OFF control switch (A), Emergency stop button (B)
Rise and Fall operating wheel (C)

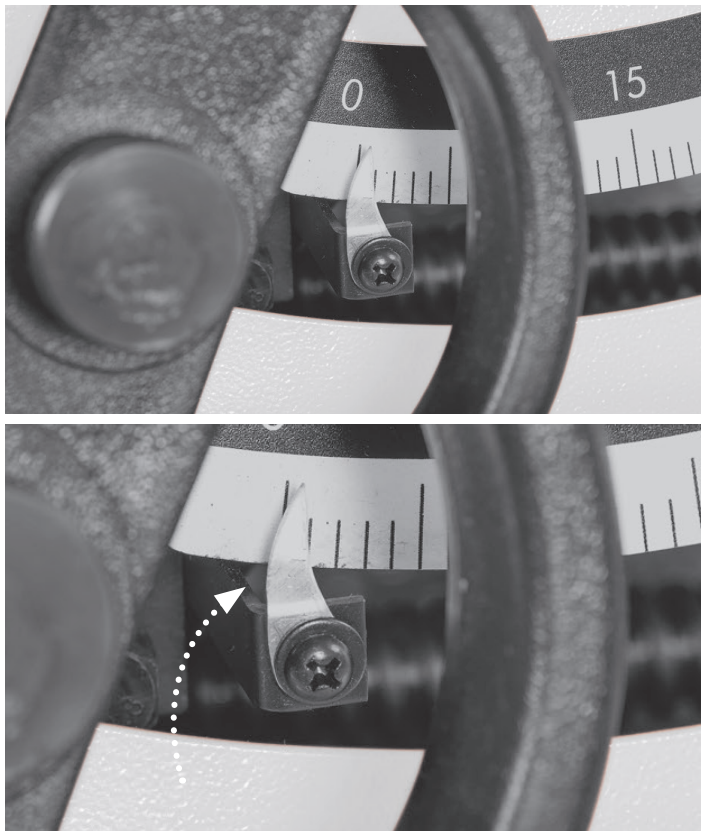

Tilt scale pointer and adjusting screw




Optional 104928 Mitre Fence



100mm Dust extraction moulding



Rip fence magnifying glass
and index marker

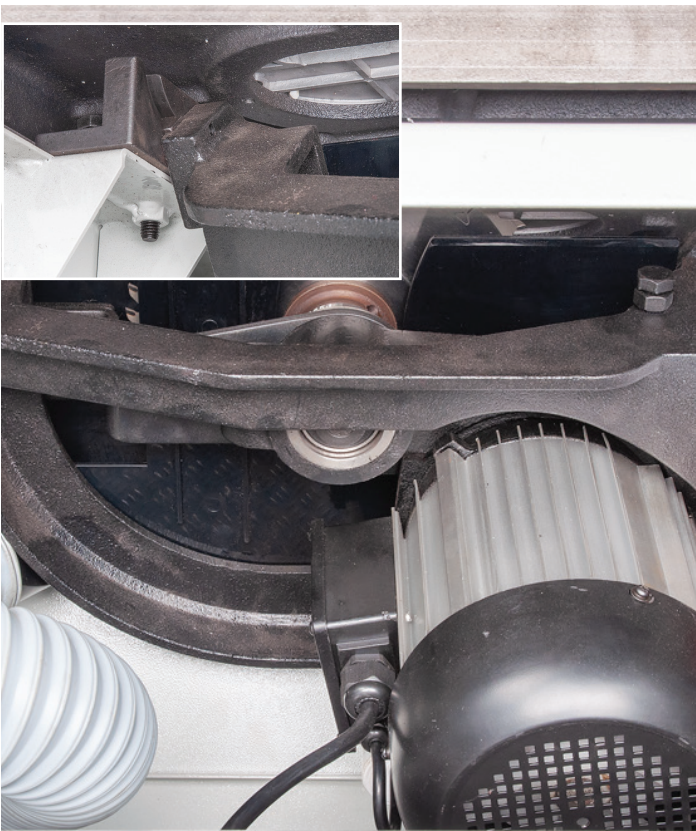

Motor and saw assembly



Optional 104933 insert gives
better material support for
cutting thin strips

SET UP AND ADJUSTMENT

The Riving Knife



1. Raise the saw blade to its highest point and remove the saw blade crown guard (K) and the table insert, place safely aside, see fig 71-72.

Fig 71-72



2. Using the spanner loosen the riving knife (H) and check that the tip of the knife has a clearance of 3-8mm between the blade. Adjust the four grub screws to the opposite side of the clamping plate to align the riving knife with the blade. Tighten the nuts to secure the riving knife in place. **NOTE: Check that the riving knife is parallel to the saw blade by placing the fence up against them,** see fig 73-74.

Fig 73-74

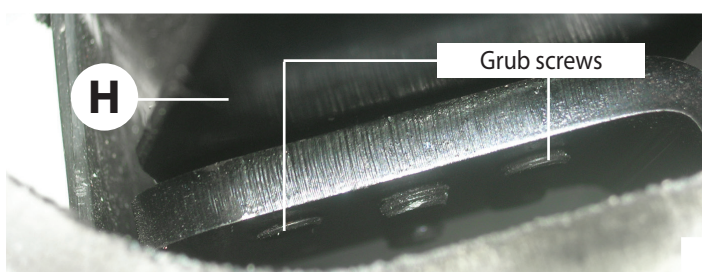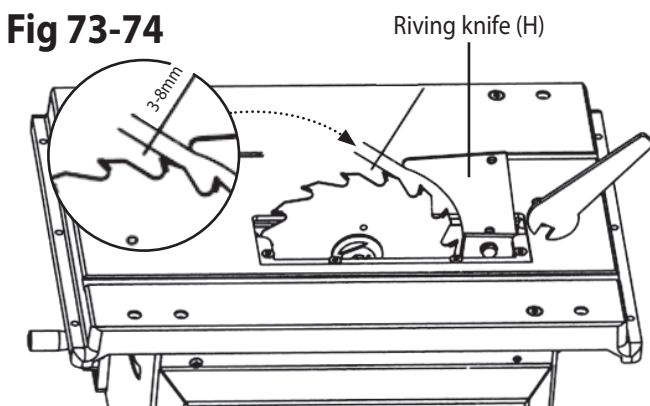

Setting the Rip Fence & Scale




MAKESURE THE BLADE IS SQUARE TO THE TABLE AND THE FENCE IS SQUARE TO THE BLADE!

The fence scale does not come pre-mounted to the fence rail and needs to be stuck in place. **NOTE: Before sticking the scale down make sure the table and fence assembly is square to the blade. Follow the instruction below.**

1. Remove the crown guard (K) and rip fence extension (F) and 'T' bolts and place safely aside. Line up the fence (E) with the edge of the tables 'T' slot and press down the locking handle, see fig 75-76.

Fig 75-76

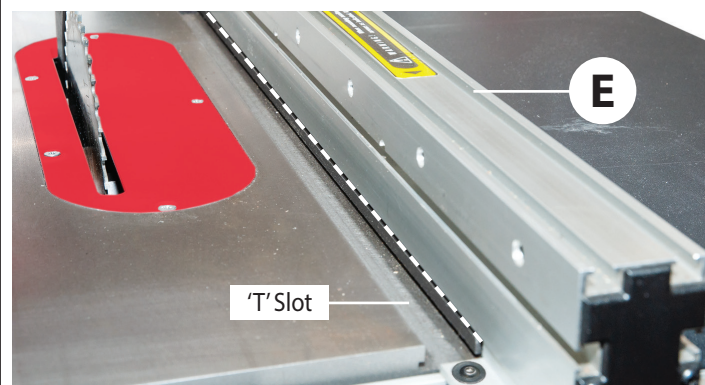


2. Check the fence is parallel with the 'T' slot, if adjustment is required loosen the four Hex screws on either side of the fence assembly and adjust the fence until it's in line, see fig 77, re-tighten the Hex screws.

Fig 77



Fig 78

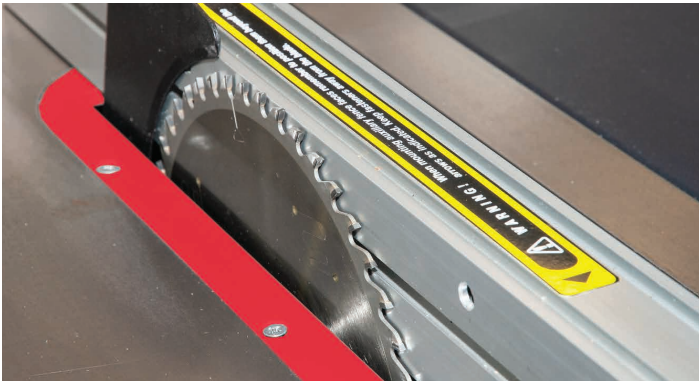

3. Place the fence assembly up against the blade and lock in place, see fig 78.



4. Using a pencil draw a line on the fence rail to mark the position, see fig 79.

Fig 79




5. Use a steel rule or vernier measure the distance between the pointer & pencil line, remove the fence assembly & mark the second position on the fence rail, see figs 80-81-82.

Fig 80-81-82

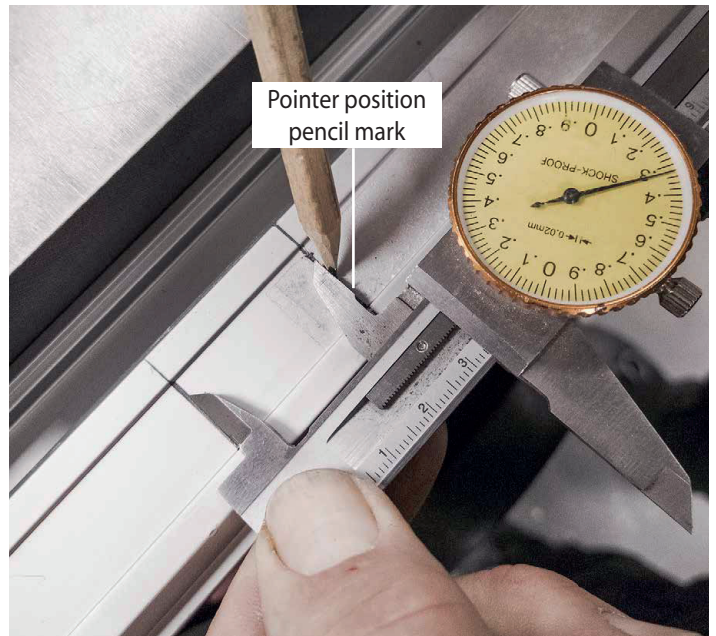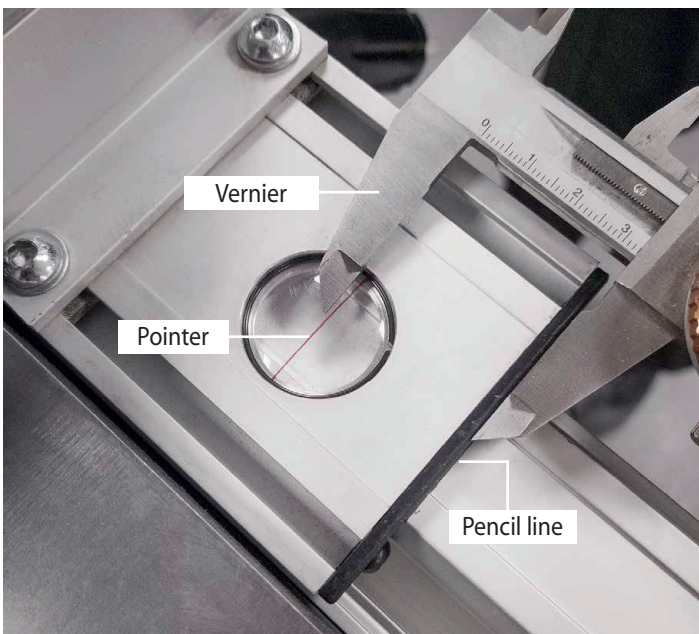

6. Locate the scale strip and peel off the backing, line-up the scale's 'Zero' line with pencil line's pointer and carefully stick down the scale strip, see 83-84.

Fig 83-84

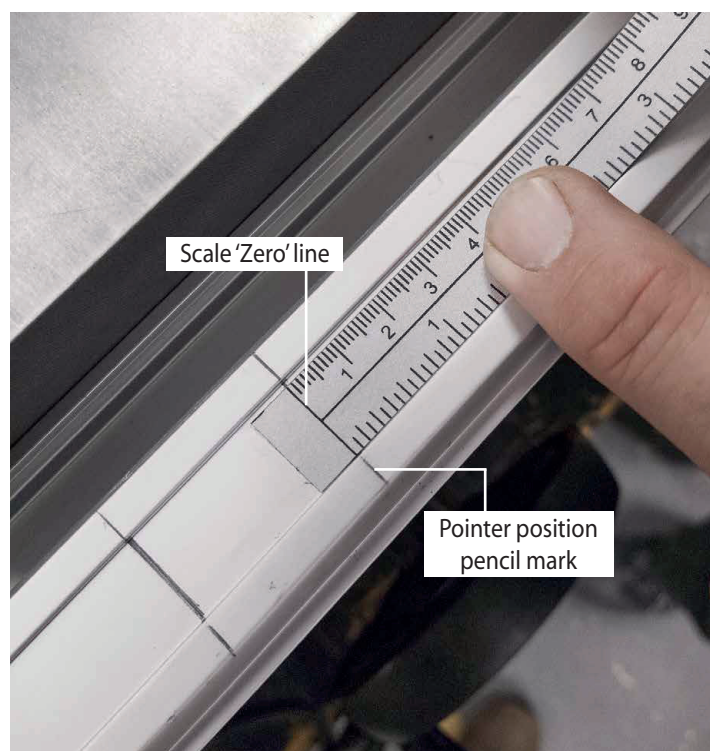



7. Trim any excess material from the end of the fence rail, see fig 85.

Fig 85



8. Replace the fence assembly and place against the blade. The magnifying glass pointer should read 'Zero' on the fence rail scale, see fig 86-87.

Fig 86-87-88



Magnifying Glass Pointer
set to 'ZERO'




'Zero' pointer

Rip Fence Extension

The rip fence extension can be repositioned from the vertical to a horizontal position for guiding thin pieces through. Loosen the two butterfly knobs holding the fence extension, remove, lay the fence extension down in the horizontal position and remount the fence extension as before, see fig 89-90. Move the extension down until the end face is centred with the blade and tighten the two butterfly knobs.

Fig 89-90

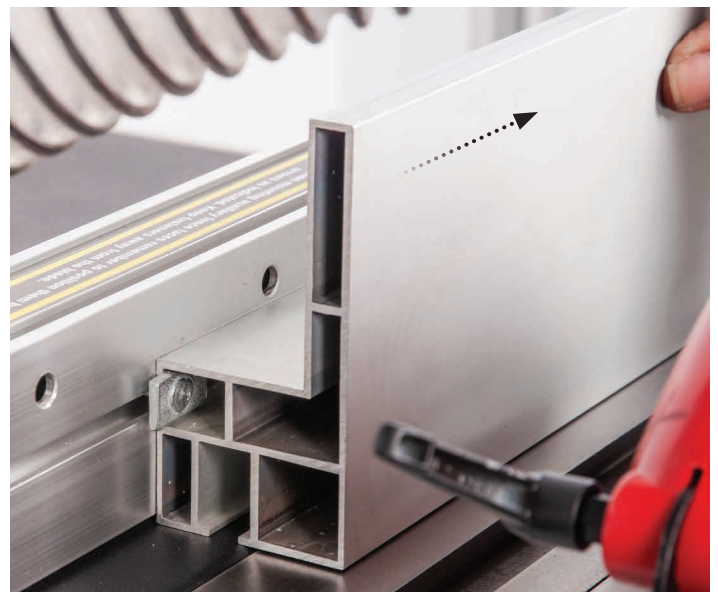



Adjusting the Cutting Height

Release the clamping knob, adjust the blade height with the rise and fall operating wheel, see fig 91, so that the blade teeth are protruding through the work piece.




Fig 91



Adjusting the Pivot

Release the locking knob to the centre of the operating wheel (a) to the side of the saw assembly and turn clockwise to pivot the saw to a maximum of 45° degrees, indicated on the scale, see fig 92-93-94.

Fig 92-93-94

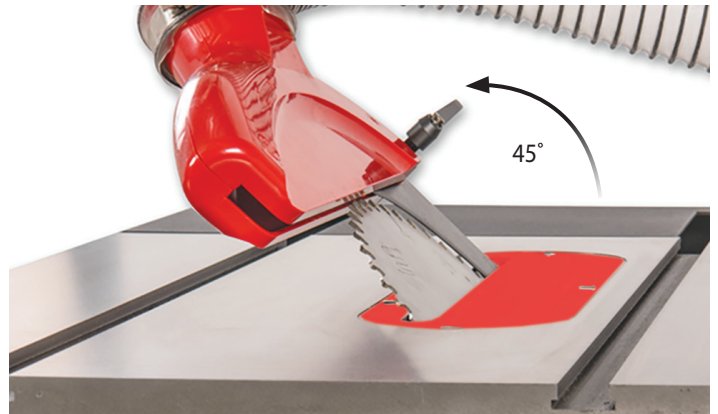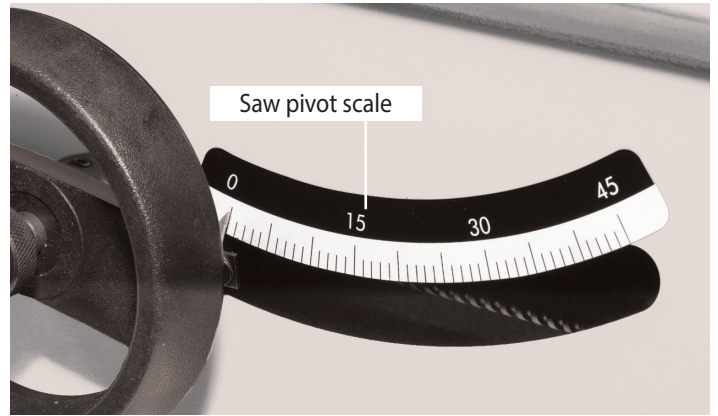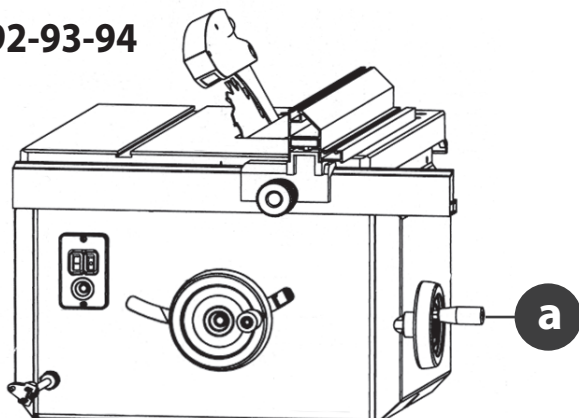

OPERATING INSTRUCTIONS



NOTE: BEFORE USING YOUR SAW, GO ROUND AND MAKE SURE EVERYTHING IS SECURE, FASTENED DOWN, THAT ALL TOOLS ARE CLEARED AWAY FROM THE WORK AREA!



CHECK: THE BLADE FOR SHARPNESS, MISSING TEETH, RESIN BUILD UP ETC., CLEAN IF NECESSARY. CHECK THE BLADE IS SECURELY CLAMPED IN PLACE (I.E. NOT LOOSE)!



CONNECT A DUST EXTRACTION MACHINE TO THE SAW.



UNDER NO CIRCUMSTANCES SHOULD CHILDREN BE ALLOWED IN THE WORK AREA AND KEEP TOOLS AND EQUIPMENT OUT OF REACH OF YOUNG CHILDREN!




CONNECT THE SAW TO THE MAINS SUPPLY!

Give the machine a 'quick' burst check (i.e. quick ON-OFF) to ensure everything is O.K. If everything is satisfactory, the table saw is ready for use.

Feeding the Work by Hand

Start up the saw, wait until it has reached full speed and slowly feed the timber through using both handles, (making sure to keep your hands well clear of the blade and using a push stick for small pieces), until the timber is behind the ripping knife. Switch off the saw, wait until the blade has come to a complete stop and remove the timber, see fig 95-96-97.

Fig 95-96-97

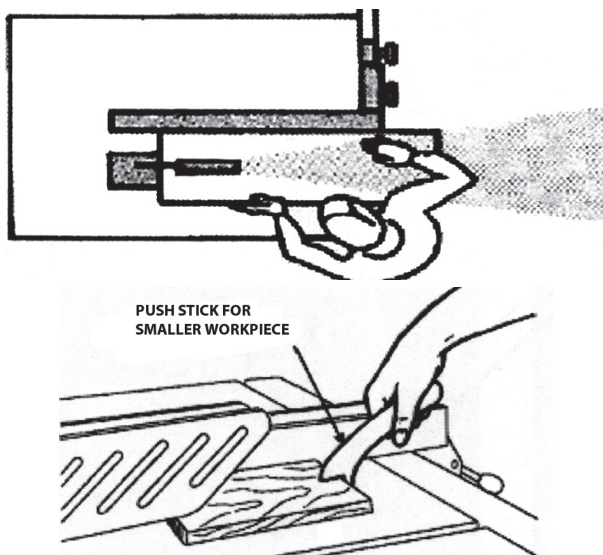

N



NOTE: Secure larger pieces of timber to the table by using the hold down clamp.


Cutting Narrow Pieces

Use the small flat surface of the rip fence extension (F) to cut thin timber narrower than 120mm, note: use a push stick.

The Optional Mitre Fence

The mitre fence (32) can be mounted on either side of the saw blade in the two 19mm 'T' slots, pre machined into the cast iron table. The mitre fence can be angled from 90° to 45° degrees, see fig 98-99-100.

Fig 98-99-100

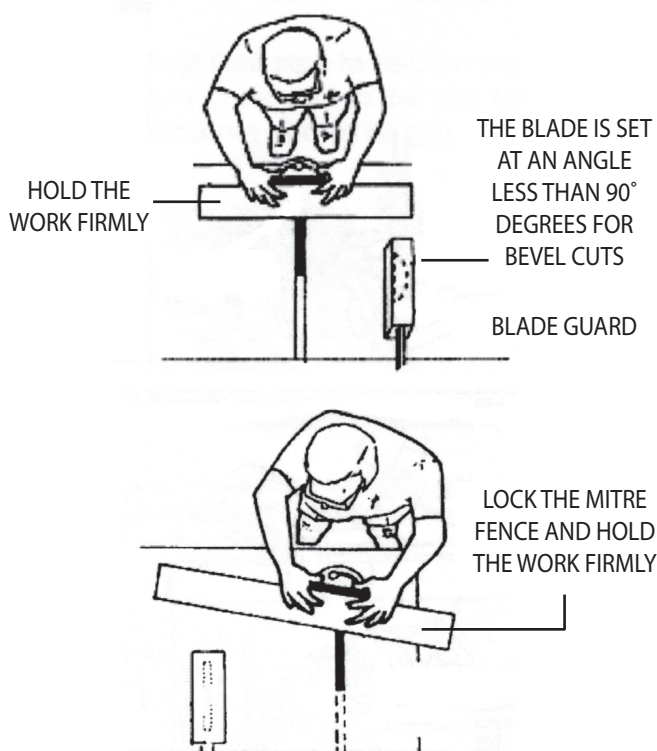




DISCONNECT THE MACHINE FROM THE MAINS SUPPLY!


1. Raise the saw blade to its highest point, remove the saw blade crown guard, remove the five cross head screws that secure the table insert, place carefully aside and remove the table insert, see fig 101-102.

Fig 101-102

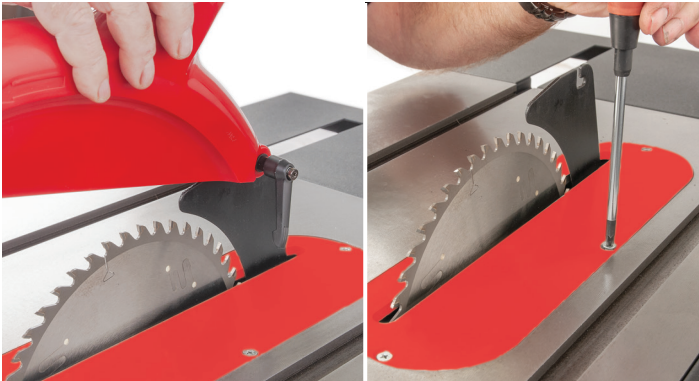

2. Turn the saw until the locking bar hole (a) is visible and insert the blade locking bar (O) into the hole, see fig 103-104.



Fig 103-104

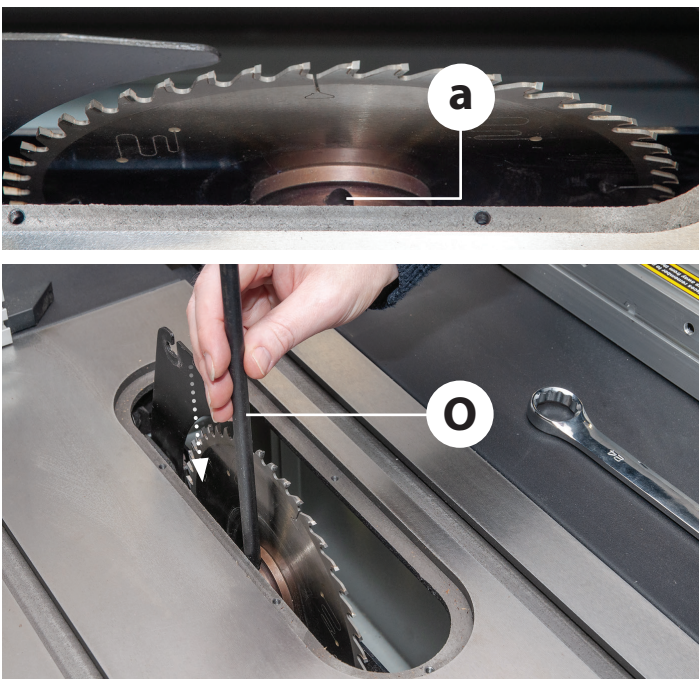

3. Hold the locking bar (O) undo and remove the nut using the 24mm spanner (P), see fig 105-106. Remove the saw plate washer (b) and the saw blade and place to one side, see fig 107-108.

4. Give the interior of the machine, the dust extraction channels, etc. a thorough clean. Check the new blade for damage, missing teeth, sharpness etc. Fit the new blade, ensure that the teeth are pointing towards the front of the machine. Put the saw plate washer onto the shaft and replace the 'Nut'

Fig 105-106-107-108

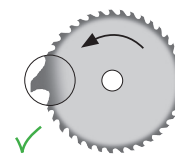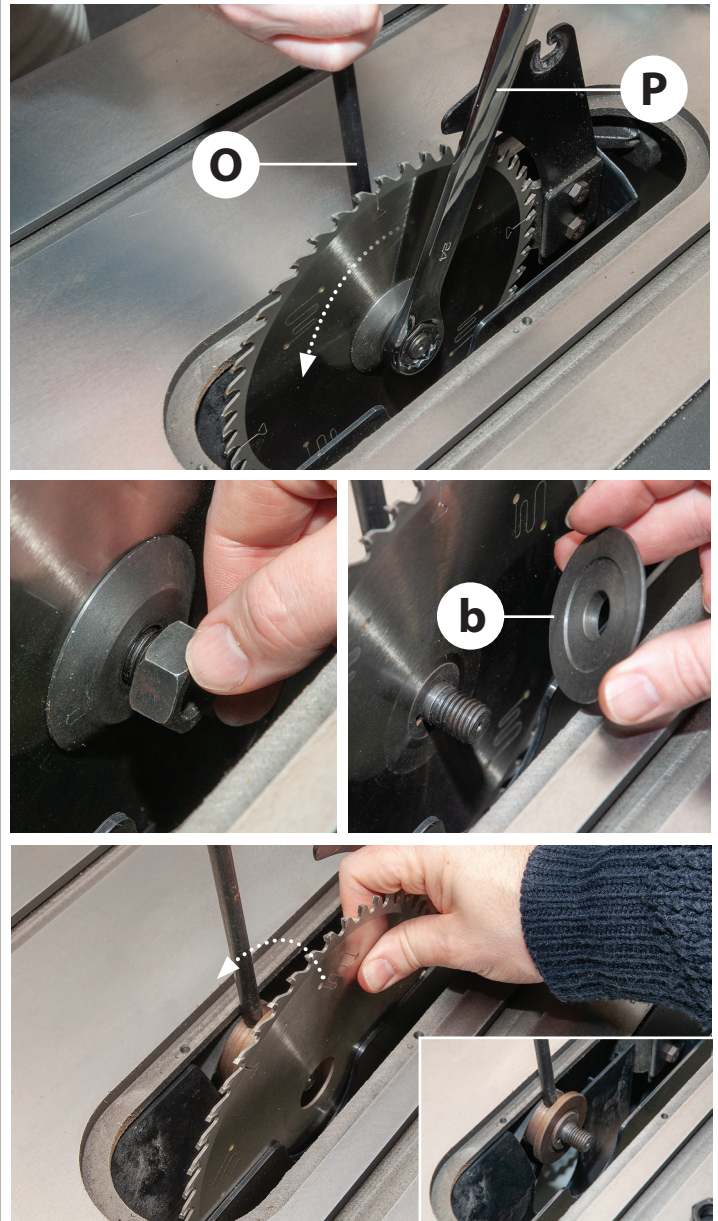


Teeth forward

until finger tight and check the saw is correctly seated.

5. Tighten up the 'Nut', using the blade locking bar (O) to hold the shaft steady. Check the riving knife is aligned with the saw blade, and correctly positioned. Replace the table insert and secure with the cross head screws. Replace the crown guard. When everything is satisfactory, turn the saw blade once by hand to check it doesn't foul anywhere.

6. Reconnect the machine to the mains supply. Give the machine a 'quick' burst (i.e. quick ON-OFF) check to ensure everything is O.K. If everything is satisfactory, continue to use the machine.




Fig 109-110

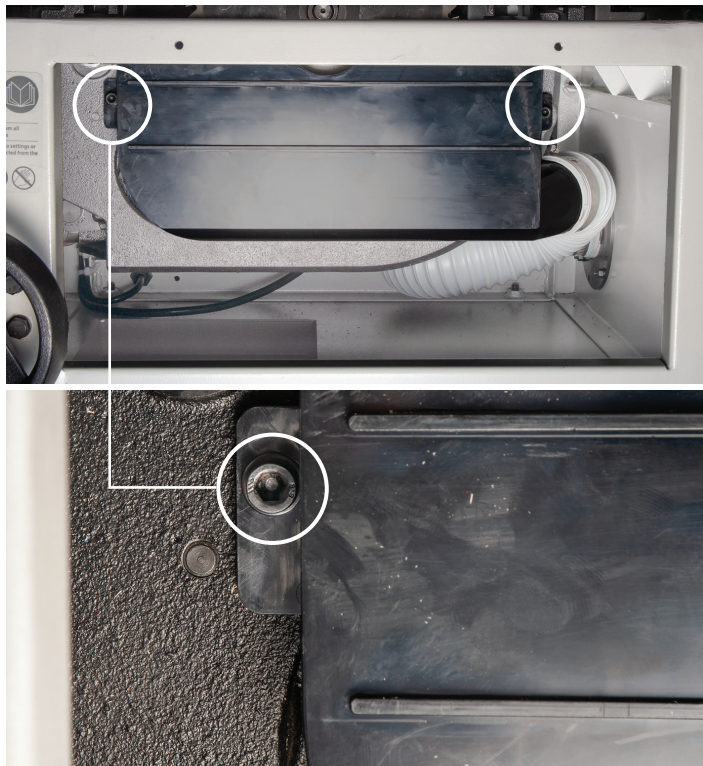

1. Keep the saw as clean and free from saw dust build up as is practical. Periodically, remove the saw gullet by removing the side access panel to the side of the machine and undo the two Hex screws on either side of the gullet, see fig 109-110. Vacuum out and clean out the saw box and the extraction housing. Remove any resin build up in the saw box, using a proprietary resin cleaner.

2. Clean the threaded drive shafts of the rise and fall and tilt mechanisms, see fig 111. At the same time check the belt drive, i.e. the belt is not 'glazing' with resin build up, likewise with the pulley wheels. Check the belt tension, see fig 112. If the belt is becoming slack, loosen the motor Hex bolts and push the motor down, see fig 113. Re-tighten the Hex bolts.

Fig 111-112-113

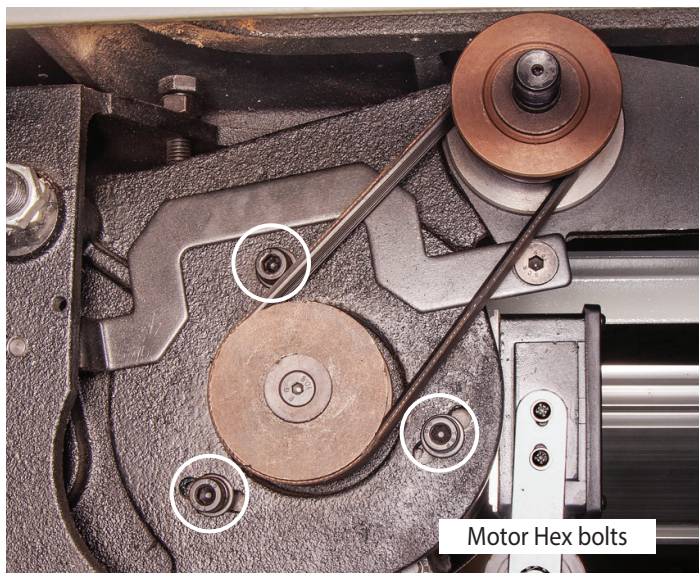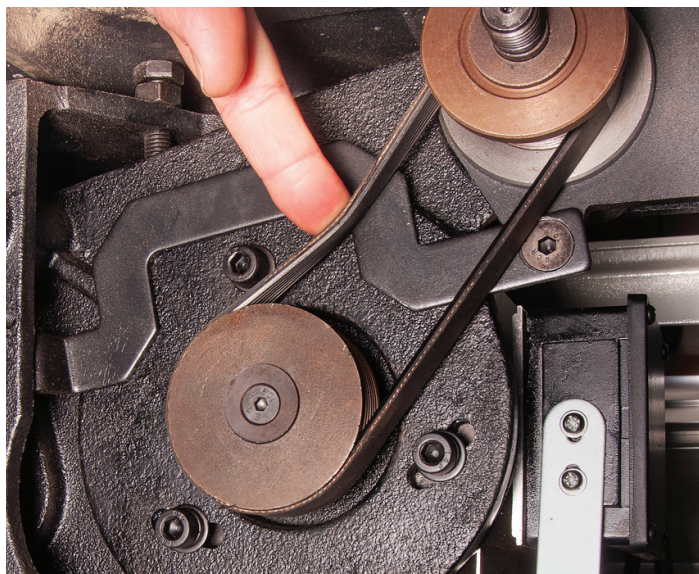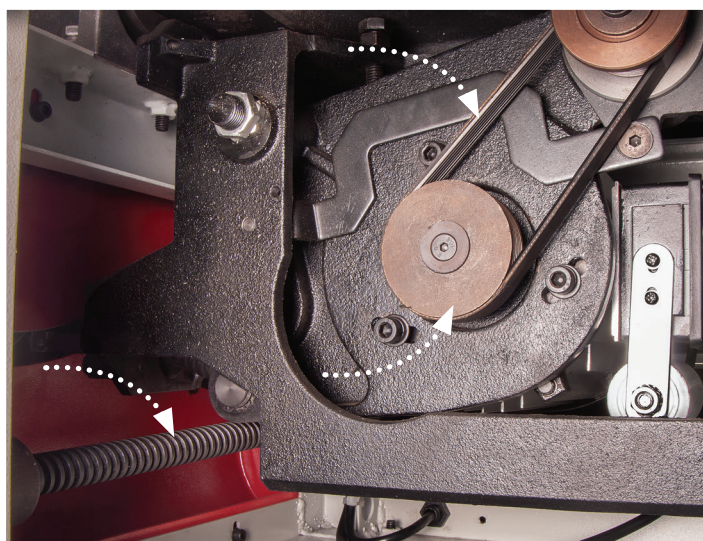

3. Check the saw blade regularly for chipped, missing, damaged teeth etc. and remove any resin build up from the blade, riving knife etc, see fig 114.


Fig 114



4. If you have finished using the saw bench, clean above and below the work table, wipe the saw bench over. If the saw is not going to be used for a period of time, use 'Ambersil Dry PTFE Film Antistick', spray, code 952137 over the work table, blade, tilt and rise and fall screw threads and place a dust sheet over the saw bench.



111810 Diagram A

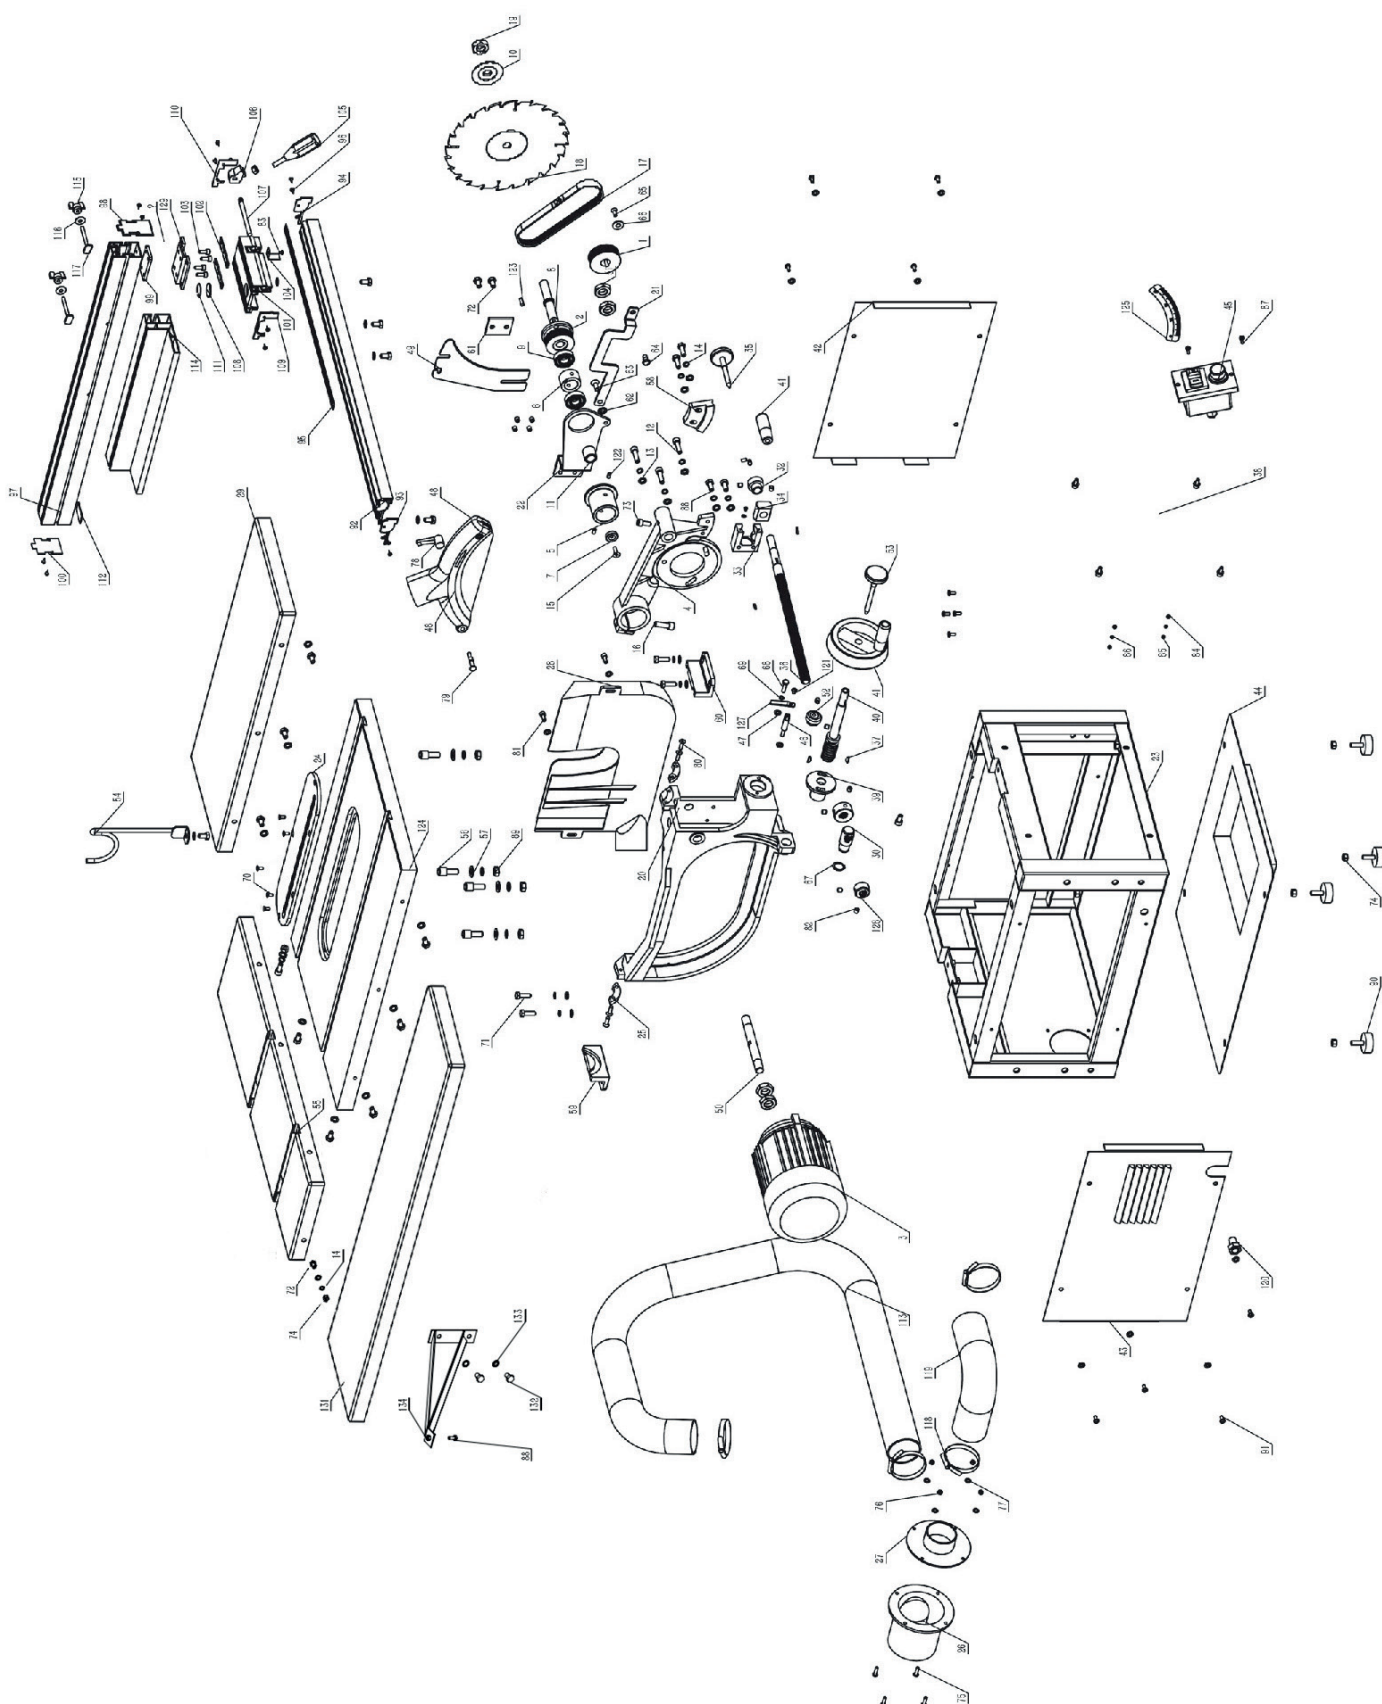


111810 Diagram A


No.	Description	No.	Description	No.	Description
1	Motor Pulley	44	Bottom Panel	89	Hex.Nut M10
2	Pulley	45	Switch	90	Levelling Foot
3	Motor	46	Pointer Block	91	Cross Recessed Pan Head Screw M6 x 12
4	Shaft Base	47	Washer 6mm	92	Front Rail
5	Saw Blade Sleeve	48	Blade Guard	93	Left End Cap Front Rail
6	Arbor Shaft Bush	49	Riving Knife	94	Right End Cap Front Rail
7	End Bush of Arbor Shaft	50	Motor Shaft	95	Scale Front Rail
8	Arbor Shaft	51	Thin Nut M16 x1.5	96	Taping Screw ST4.2 x 10
9	Bearing 6203	52	Stop B	97	Rip Fence
10	Outer BladeWasher	53	Locking Knob B	98	Front End Cap Rip Fence
11	Arbor Shaft Bush	54	Tube Support	99	Screw Guide
12	Hex.Socket Cap Head Bolt M8 x 30	55	Rear Extension Table	100	Rear End Cap Rip Fence
13	Washer 8	56	Step Screw	101	Scale Rail Housing
14	SpringWasher 8	57	BigWasher 10	102	Locking Nut Board
15	Cross Recessed Socket Screw M6 x 20	58	Height Adjusting Gear	103	Hex.Socket Cap Head Bolt M6 x 16
16	Hex.Socket Cap Head Bolt M10 x 30	59	Mounting Base A	104	Locking Spring Plate
17	Multi-Groove Belt	60	Mounting Base B	105	Locking Knob
18	Saw Blade	61	Pressing Plate Riving Knife	106	EccentricWheel
19	M16 Nut	62	Washer 10	107	Locking Shaft
20	Rotating Bracket	63	Hex.Recessed Socket Screw M8 x 20	108	Scale Indicator
21	Connection Rod of Riving Knife	64	Pull-Rod Shaft	109	Left End Cap Scale Rail Housing
22	Riving Knife Bracket	65	Hex.Recessed Socket Screw M6 x 15	110	Right End Cap Scale Rail Housing
23	Machine Body	66	Motor Pad	111	Circle Ring
24	Table Insert	67	Cir-Clips for Shaft D=20	112	Supporting Plate
25	Rotating Block	68	Hex.Bolt M6 x 25	113	Dust Collection Tube
26	Tie-in B	69	SpringWasher 6	114	Rip Fence
27	Tie-in A	70	Hex.Recessed Socket Screw M5 x 12	115	Wing Nut
28	Saw Blade Guard	71	Hex.Bolt M8 x 25	116	BigWasher 6
29	Right Extension Table	72	Hex.Bolt M8 x 16	117	Locking Screw
30	Adjusting Thread Rod Nut	73	Hex.Socket Cap Head Screw M8 x 20	118	Neck Chain
31	Stop Collar	74	Hex.nut M8	119	Dust Collection Tube Inside The Machine Body
32	Stop A	75	Cross Recessed Pan Head Screw M5 x 20	120	Cableland M14
33	Mounting Seat A	76	Hex.Nut M5	121	Cross Recessed Pan Head Screw M5 x 8
34	Angel Connection Knob	77	Washer 5	122	Spring Pin 6
35	Locking Knob A	78	Ratchet Lever	123	Key 5 x 20
36	Adjust Thread Rod	79	Bolt,blade guard	124	Worktable
37	Semi-Circle Key 3 x16	80	Cross Recessed Socket Screw M6 x 15	125	Scale Table Rotation
38	Front Panel	81	Hex.Socket Cap Head Screw M6 x 12	126	Hex.Socket Cap Head Bolt M8 x 16
39	Mounting Seat B	82	Hex.Socket Set Screw M8 x 8	128	Pointer
40	Height Adjusting Thread Rod	83	Cross Recessed Pan Head Screw M4 x 6	129	Stop Collar
41	HandWheel	84	Washer 4	130	Fence Plate
42	Right Panel	85	Hex.Nut M4	131	Left Extension Table
43	Left Panel	86	SpringWasher 4	132	Hex.Bolt M8 x 20
		87	Cross Recessed Pan Head Screw M4 x 15	133	Washer 12
		88	Hex.Bolt M8 x 20	134	Left Extension Table Support

EXPLODED DIAGRAMS/LISTS

Floor Stand Diagram B

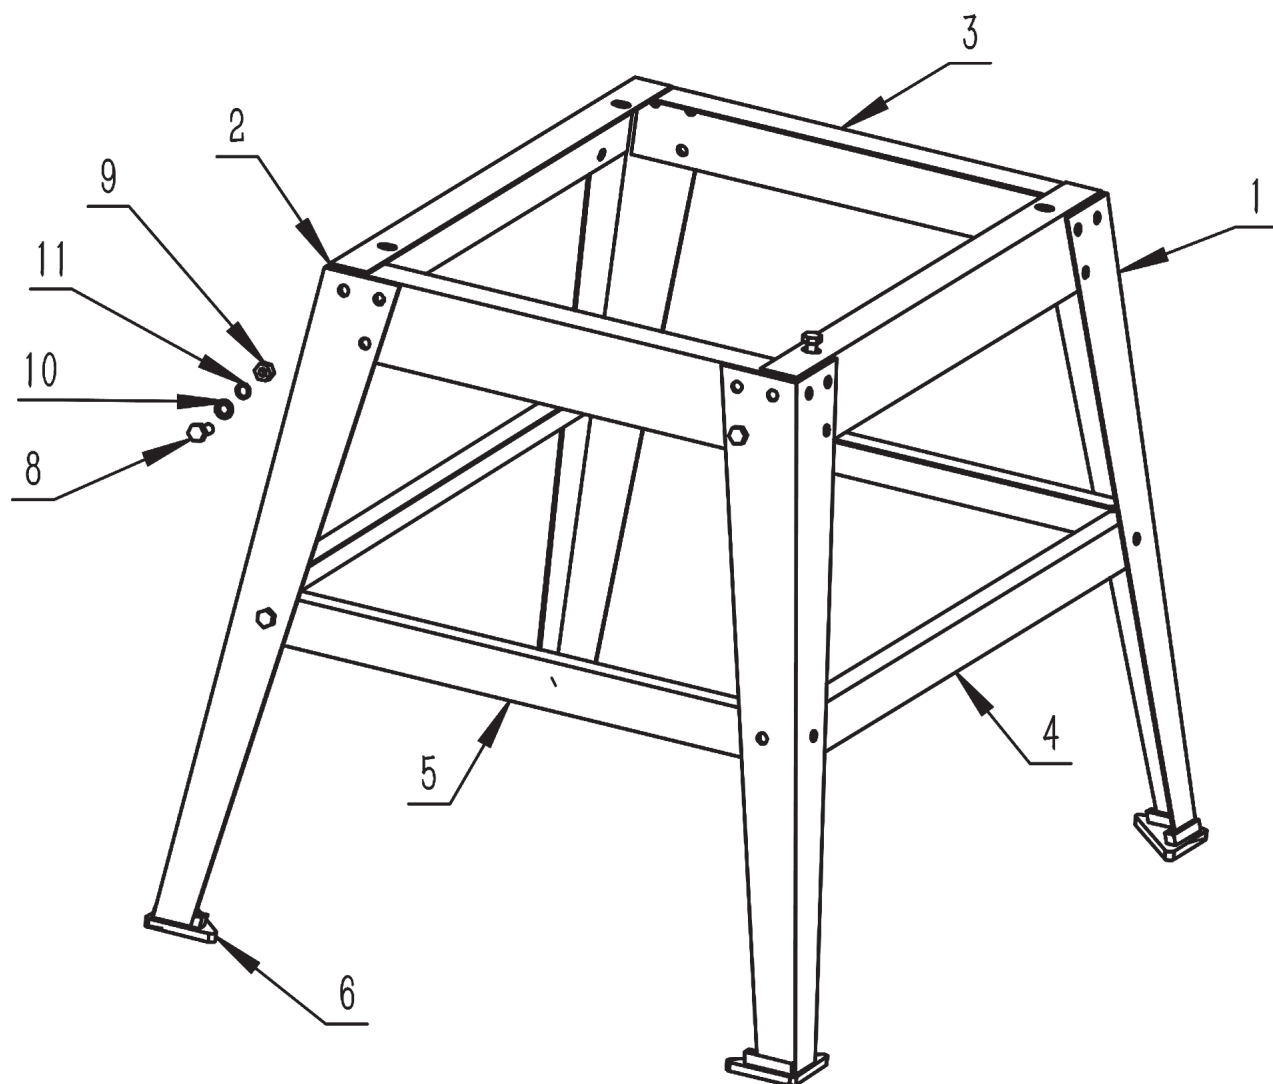

No.	Description
1	Stand Leg
2	Upper Long Bracket Stand Leg
3	Upper Short Bracket Stand Leg
4	Lower Long Bracket Stand Leg
5	Lower Short Bracket Stand Leg
6	Levelling Foot
8	Hex.Nut M8
9	Washer 8mm
10	Hex.Bolt M8 x 16

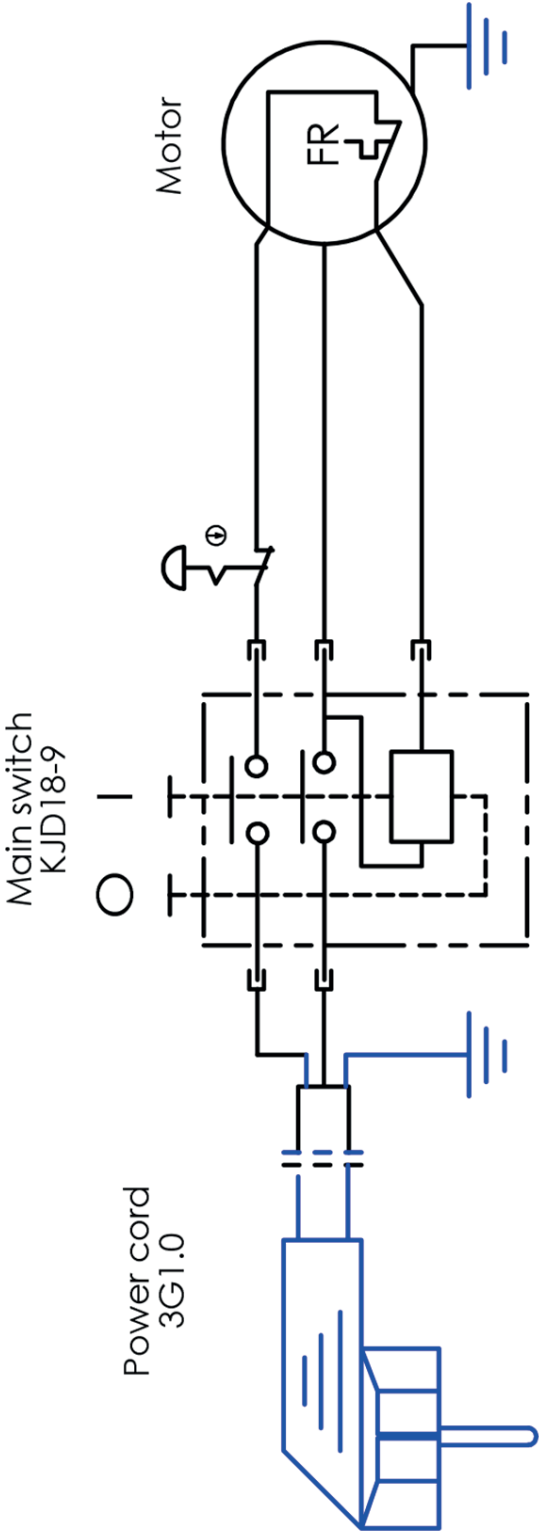





The packaging is suitable for recycling.
Please dispose of it in a responsible manner.



EU Countries Only

Do not dispose of electric tools together with household waste material.
By law they must be collected and recycled separately.



Axminster Tools, Axminster Devon EX13 5PH

axminstertools.com